

Parts Manual




SERIES 7000 COMPACT TRACTOR MODEL 7252

ECO 11781

TABLE OF CONTENTS


DESCRIPTION	PAGE
Frame	3
Pedestal	4
Axle, Front	5
Hydraulics	6
Lift Valve and Position Control	7
Dash Panel and Steering Wheel	8
Controls	10
Battery and Electrical	12
Transmission Connections	13
Transmission 2WD Transmission Differential and Final Drive Traction Drive PTO Drive Engine and Drive Shaft	14 16 18 20 22
Engine Cylinder Heads and Crankcase Pistons and Crankshaft Valves and Camshaft Lubrication Electrical Cooling Control Linkage and Governor Carburetor Air Filter Starter	24 26 27 28 29 30 32 33 34 35
Hood, Grill and Side Panels	36
Fender and Running Board	38
Seat Assembly	40
Fuel Tank	41
Foldable ROPS	42
Three Point Hitch	43
Auxiliary Hydraulic Loader Valve (If Equipped)	44
Wheels	46

FRAME

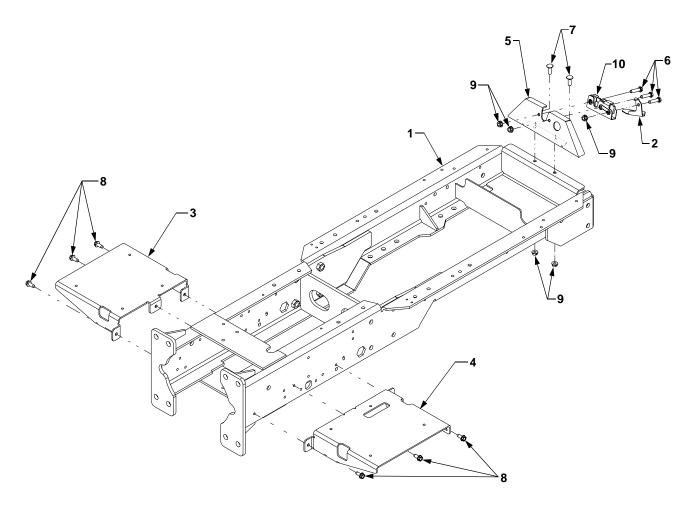


REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	603-0666		Frame	1
2	703-3503A		Lever, Hood Latch	1
3	703-3497A		Bracket, Running Board Mtg. LH	1
4	703-3379A		Bracket, Running Board Mtg. RH	1
5	703-05137		Bracket, Hood Latch Mtg	1
6	710-3083		Screw, Hex Cap, 5/16-18 x 1.375 GR5	3
7	710-0451		Screw, Carriage,5/16-18 x .75	2
8	710-1260A		Screw, Hex Wash. Hd5/16-18 x .75	6
9	712-3004A		Nut, Hex Flange Lock, 5/16-18	5
10	726-0455		Latch, Hood	1

PEDESTAL

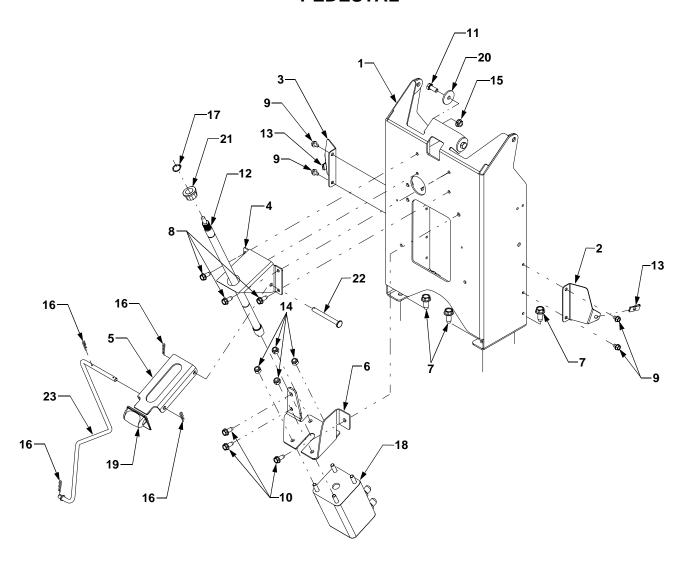


REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	CODE DESCRIPTION	QTY.
1	703-3383A		Pedestal		11	710-3008	Screw, Hex Cap	2
2	703-3717		Bracket, Dash Mtg. RH	. 1			5/16-18 x .75 GR5	
3	703-3721		Bracket, Dash Mtg. LH	. 1	12	711-1361	Shaft, Steering	1
4	703-3725		Bracket, Steering Column	. 1	13	712-0292	Nut, Speed, 1/4-20	2
5	703-3895		Bracket, Brake Lever	. 1	14	712-0411	Nut, Hex Nylon Insert Lock, 5/16-24 GR8	4
6	703-4064		Bracket, Pump Mtg	. 1			5, 15 = 1 5 1 15	_
7	710-0623		Screw, Hex Wash, Hd Tapp	4	15	712-3004A	3 - 1 - 7	2
			3/8-16 x .75		16	714-0104	Pin, Internal Cotter	4
8	710-0642		Corow Hoy Wook Hd Tonn	1	17	716-0101	Ring, Snap, .75 ID	1
0	710-0042		Screw, Hex Wash, Hd Tapp	4	18	718-3129	Pump, Hydraulic Steering	1
_	740 0050				19	731-3359	Lever, Parking Brake	1
9	710-0653		Screw, Hex Wash, Hd Tapp 1/4-20 x .375	4	20	736-0343	Washer, Flat, .33 x 1.25 x .12	2
			1/4-20 X :373		21	741-0245	Bearing, Hex Flange, .75 ID	1
10	710-1260A		Screw, Hex Wash, Hd Tapp	3	22	747-3454	Pin, Parking Brake Pivot	
			5/16-18 x .75		23	747-3543A	Rod, Parking Brake	1

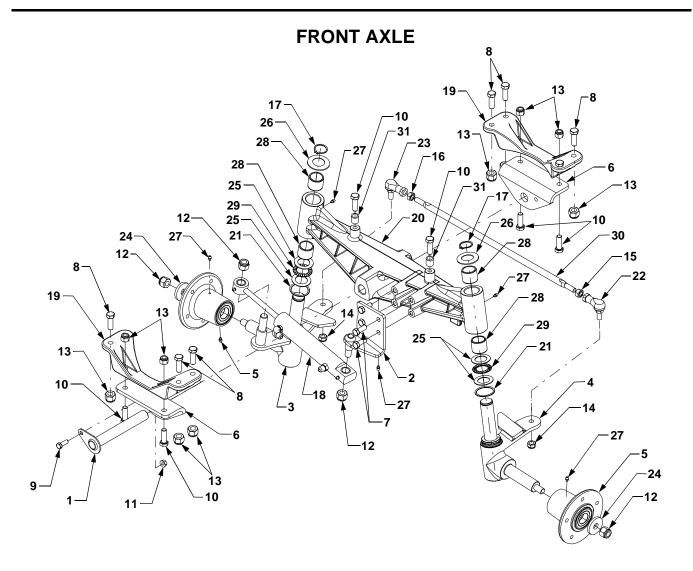


REF.	PART NUMBER	CODE	DESCRIPTION	QTY.	REF.	PART NUMBER	CODE DESCRIPTION	QTY.
1	603-0721	CODE			14	712-3103		
•		0007	Pin, Pivot Axle				Nut, Hex Flange Lock, M12 x1.75	
2	603-0735	0637	Plate, Steering Cylinder Mtg	1	15	712-3104	Nut, Hex, M12 x 1.75 RH Thrd	
3	603-0908	0637	Spindle Assembly, Steering LH	1	16	712-3105	Nut, Hex, M12 x 1.75 LH Thrd	1
4	603-0909	0637	Spindle Assembly, Steering RH	1	17	716-0116	Ring, Snap, 1.25 Dia Shaft	2
5	619-3078		Hub Assembly		18	717-3502	Cylinder, Steering	1
	741-3116		Bearing, Ball	4	19	719-3158	Bracket, Axle Mtg	2
6	703-3506		Plate, Pivot Axle Mtg		20	719-3163	Axle, Pivot	. 1
7	710-1843		Screw, Hex Cap,	4	21	721-0526	O-Ring, 1.374 x .139	
			M12-1.75 x 25 GR8		22	723-0462	Ball Joint, RH Thrd	
8	710-3067		Screw, Hex Cap,	8	23	723-0463	Ball Joint, LH Thrd	. 1
_			1/2-13 x 1.75 GR5		24	736-0746	Washer, Flat, .66 x 1.94 x .25	2
9	710-3118		Screw, Hex Cap	1	25	736-0748	Washer, Flat, 1.25 x 1.94 x .063	
40	740 0404			0	26	736-0869	Washer, Flat, 1.25 x 2.25 x .040	2
10	710-3181		Screw, Hex Cap	ь	27	737-3000	Fitting, Lube, 3/6 Drive	. 5
11	712-3005		Nut, Hex Flange Lock,	1	28	741-3110	Bearing, Sleeve, 1.25x1.5x1.25	4
• • •	7 12 0000		3/8-16 GR5	•	29	741-3115	Bearing, Thrust, 1.25 x 1.94 x .78	3 2
12	712-3016		Nut, Hex Insert Lock 5/8-11 GR5	4	30	747-3421	Rod, Tie	1
13	712-3083		Nut, Hex Insert Lock, 1/2-13 GR8		31	750-0499	Spacer, .501 x .75 x .78	2

HYDRAULICS

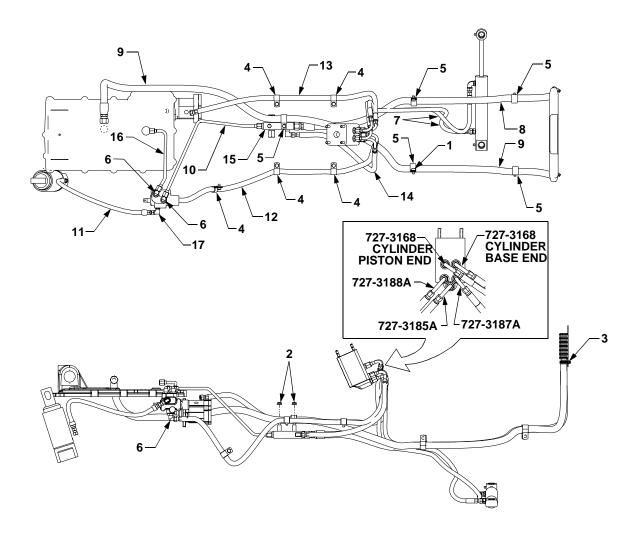


REF.	PART NUMBER	CODE DESCRIPTION	QTY.		PART NUMBER	CODE DESCRIPTION	QTY.
1	710-0607	Screw, Hex Wash Hd. Tapp 5/16-18 x .5	9	9 10	727-3178 727-3182	Hose, Oil Return Tube, Lift Return Line	
2	712-3004A	Nut, Hex Flange Lock, 5/161-18 GR5	2	11	727-3184	Hose, Lift Cylinder	1
3	726-0132 726-04004	Clamp, Adjustable Hose Clamp, Hose		12 13 14	727-3185A 727-3187A 727-3188A	Hose, Lift Inlet Hose, Steering Pressure Hose, Steering Tank	1
5 6 7 8	726-0475 727-3012 727-3168 727-3177	Clamp, Hose Fitting, 90 Degree Hose, Steering Tube, Oil Cooler Return	3 2	15 16 17	727-3199 727-3209 737-3127	Manifold, Return Tube, Cylinder Return Fitting, 90 Degree	1 1

LIFT VALVE AND POSITION CONTROL

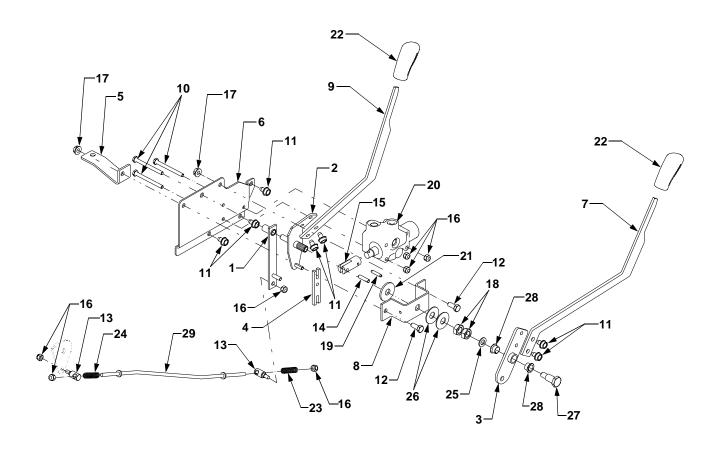


REF. NO.	PART NUMBER	CODE DESCRIPTION	QTY.	REF. NO.	PART NUMBER	CODE I	DESCRIPTION	QTY.
1	603-0663	Link Assembly, Feedback		16	712-0324	١	Nut, Hex Nylon Insert Lock	7
2	603-0664	Link Assembly, Input		١			14-20 GR8	_
3	603-0776	Hub Assembly, HI-LO Shifter		17	712-3004A		Nut, Hex Flange Lock,	2
4	703-3360	Link, Feedback	. 1				5/16-18 GR5	
5	703-3610	Bracket, Lift Brace	. 1	18	712-3029	1	Nut, Hex Jam, 1/2-20 GR5	2
6	703-3697	Bracket, Valve Mtg	. 1	19	715-0120	F	Pin, Spirol, 3/16 x 1.0	1
7	703-3698	Handle, HI-LO Shifter		20	718-3130	\	Valve, Hydaulic Lift	1
8	703-3762	Bracket, Lift Mtg		21	723-3013	\	Washer, Friction, .515 x 1.5 x .12	. 1
9	703-3763A	Handle, Lift		22	731-3321	(Grip, Handle	2
10	710-0564	Screw, Hex Cap,	. 3	23	732-0330	5	Spring, Compression	1
		1/4-20 x 2.75 GR5		24	732-0499	5	Spring, Compression	1
11	710-0607	Screw, Hex Wash Hd. Tapp	. 7	25	736-0185	V	Washer, Flat, .375 x .738 x .063	1
		5/16-18 x .5		26	736-3022	١	Washer, Belleville,	2
12	710-3008	Screw, Hex Cap,	2				.53 x 1.375 x .06	
		5/16-18 x .75 GR5		27	738-0145	5	Screw, Shoulder,	1
13	711-1316	Ferrule, Feedback Adjustment	2				.5 x .835:3/8-16	
14	711-1612	Pin, .25 x 1.0	. 1	28	741-0491	E	Bearing, Nylon Flange .5 ID	2
15	711-1614	Link, Valve		29	747-3394	F	Rod, Feedback	1

DASH PANEL AND STEERING WHEEL

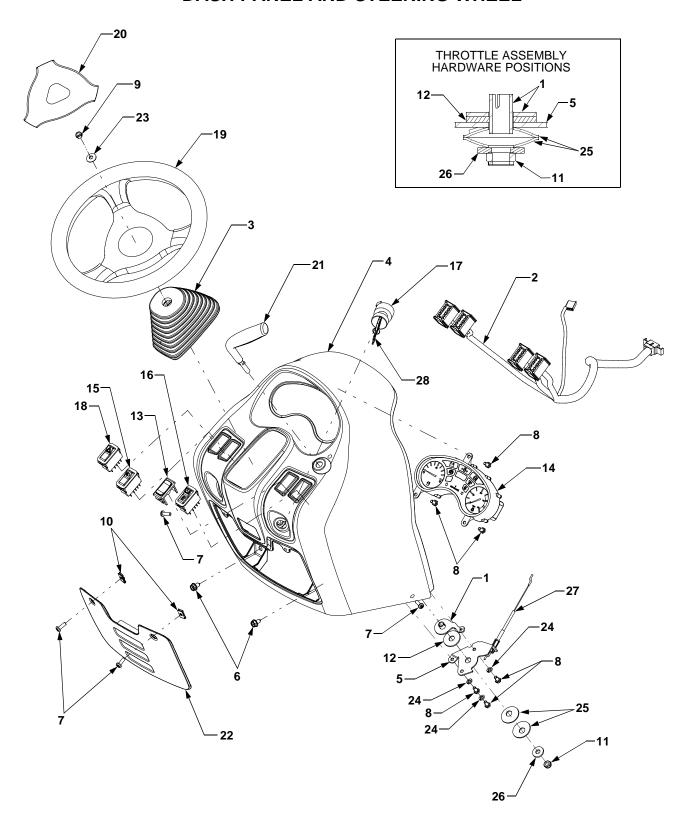

DASH PANEL AND STEERING WHEEL


REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	603-0711		Tab Assembly, Throttle	1
2	629-3061		Wire Harness, Dash	1
3	631-0076		Boot, Steering Shaft	1
4	631-04007A		Dash	1
5	703-05132		Plate, Throttle Mtg	1
6	710-0604A		Screw, Hex Wash. Hd. Tapp 5/16-18 x .625	2
7	710-0924		Screw, Pan Hd., 1/4-20 x .75	4
8	710-3013		Screw, Hex Cap, 1/4-20 x .5 GR5 .	6
9	712-0237		Nut, Hex Lock, 5/16-24	1
10	712-0292		Nut, Speed, 1/4-20	2
11	712-0116		Nut, Hex Insert Jam Lock, 3/8-24	1
12	723-3013		Washer, Friction, .515 x 1.5 x .12	1
13	725-2017		Plug	1
14	725-3265		Panel, Instrument	1
	725-3285 735-0688		Bulb Plug	12 12
15	725-3274		Switch, Headlight	1
16	725-3276		Switch, PTO	1
17	725-3277		Switch, Ignition	1
18	725-3279		Switch, Hazard	1
19	731-3209		Steering Wheel, Soft Grip	1
20	731-3210		Cover, Steering Wheel	1
21	731-3298		Handle, Throttle	1
22	731-3344		Panel, Dash Insert	1
23	736-0242		Washer, Belleville, .34 x .872 x .06	1
24	736-0329		Washer, Lock, 1/4	3
25	736-0112		Washer, Belleville, .531 x 1.62 x .045	
26	736-3052		Washer, Flat, .406 x 1.0 x .105	1
27	746-3086A		Cable, Throttle	1
28	759-3950		Key Set, Ingition	1

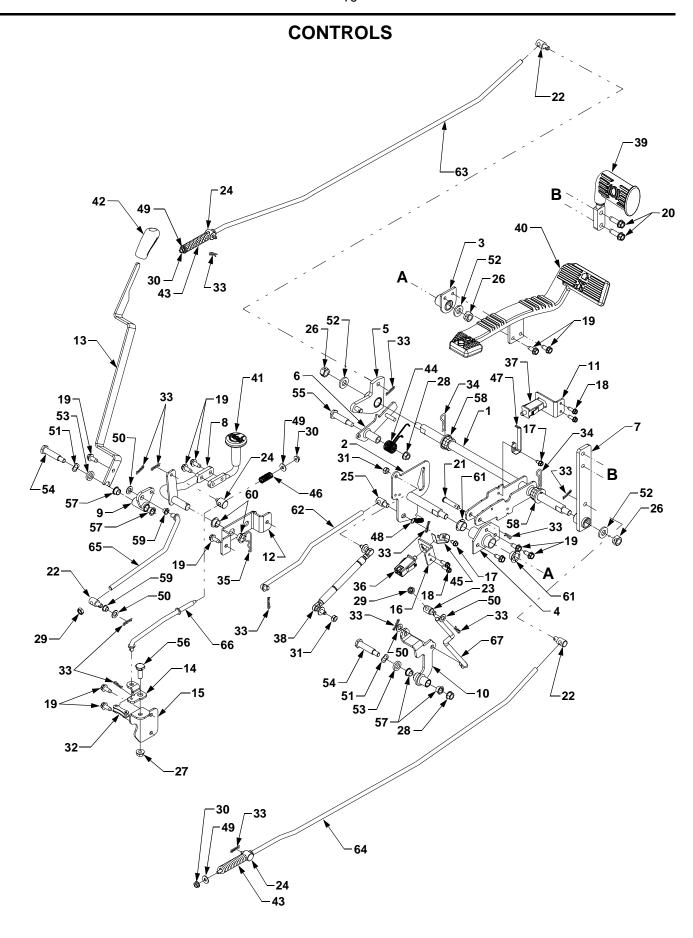

CONTROLS

REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	603-0671		Shaft Assembly, Brake	1	34	714-0147		Pin, Internal Cotter	2
2	603-0672		Shaft Assembly, Forward	1	35	714-3020		Pin, Internal Cotter	1
3	603-0673A		Link Assembly, Pedal	1	36	725-3164A		Switch, Plunger	1
4	603-0674A		Plate, Bearing	1	37	725-3191A		Switch, Plunger	1
5	603-0678		Link Assembly, Brake LH	1	38	727-04033		Cylinder, Damper	1
6	603-0679A		Link Assembly, Parking Brake	1	39	731-3296		Pedal, Brake	. 1
7	603-0680		Link Assembly, Brake RH	1	40	731-3299A		Pedal, Forward/Reverse	1
8	603-0749		Shaft Assembly, Differential	1	41	731-3320		Pedal, Differential	1
9	603-0770		Link, PTO Select	1	42	731-3321		Grip, Handle	1
10	603-0774		Link, HI-LO Shift	1	43	732-0324		Spring, Compression	2
11	703-3152		Bracket, Reverse Switch	1	44	732-0756A		Spring, Torsion	1
12	703-3541		Bracket, Differential Pivot	1	45	732-0859		Spring, Rev/No Cut	
13	703-3571		Handle, PTO	1	46	732-3065		Spring, Compression	1
14	703-3575		Link, Differential Pivot	1	47	732-3117		Spring, Switch Actuator	1
15	703-3582		Bracket, Diff. Actuator Mtg	1	48	732-3118		Spring, Extension	1
16	703-4099		Bracket, Reverse Switch	1	49	736-0173		Washer, Flat, .28 x .74 x .063	3
17	710-0599		Screw, Hex Wash Hd Tapp	2	50	736-0185		Washer, Flat, .375 x .738 x .063	4
			1/4-20 x .5		51	736-0232		Washer, Wave, .53 x .78 x .013	2
18	710-0642		Screw, Hex Wash Hd Tapp	4	52	736-3019		Washer, Flat, .53 x .1.06 x .134	3
			1/4-20 x .75		53	736-3069		Washer, Flat, .53 x .875 x .15	2
19	710-1260A		Screw, Hex Wash Hd Tapp	12	54	738-0509		Screw, Shoulder, .50 x 1.825	2
			5/16-18 x .75		55	738-0533		Screw, Shoulder, .498 x 1.635	1
20	710-0654A		Screw, Hex Wash Hd Tapp 3/8-16 x 1.0	2	56	738-0689		Screw, Shoulder	1
21	711-0415		Pin, Clevis, 3/8 x 1.75	1	57	741-0491		Bearing, Nylon50 ID x .341	4
22	711-0723A		Ferrule, 3/8-24 x .375 Dia. Hdn	3	58	741-0598		Bearing, Hex Flange, .752 ID	
23	711-0832		Ferrule, 3/8-24 x .375 Dia. Hdn	1	59	741-3073		Bearing, Flange, .375 x .58 x .25	
24	711-1362		Ferrule, Brake		60	741-3074		Bearing, Flange	
25	711-3397		Ferrule, 3/8-24 x .37					.626 x .938 x .344	
26	712-0239		Nut, Hex Lock, 1/2-20		61	741-3084		Bearing, Flange	2
27	712-0379		Nut, Hex Flange Lock, 3/8-24	1				.751 x 1.125 x .375	
28	712-0431		Nut, Hex Flange Lock, 3/8-16		62	747-3396		Rod, Hydro Control	1
29	712-0711		Nut, Hex Jam, 3/8-24	2	63	747-3399		Rod, Brake, LH	1
30	712-3027		Nut, Hex Flange Lock, 1/4-20		64	747-3400		Rod, Brake, RH	1
31	712-3077		Nut, Hex, M8 x 1.25 GR8.8		65	747-3414		Rod, PTO Control	
32	713-3000		Link, Chain	1	66	747-3428		Rod, Diff. Lock Control	1
33	714-0104		Pin, Internal Cotter	13	67	747-3429		Rod, HI-LO Control	1


BATTERY AND ELECTRICAL

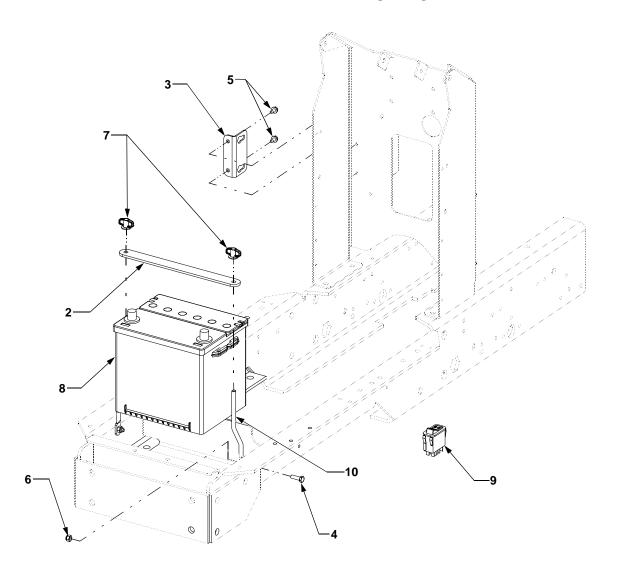

REF.	PART			
NO.	NUMBER	CODE	DESCRIPTION	QTY.
†	629-3060		Harness, Main Wire	1
2	703-4104	0637	Strap, Battery Holddown	1
3	703-4131		Bracket, Fuse Center	1
4	710-0206		Screw, Hex Cap, 1/4-10 x .875 GR5	2
5	710-0599		Screw, Hex Wash Hd. Tapp 1/4-20 x .5	2
6	712-0324		Nut, Hex Nylon Insert Lock, 1/4-20	2
7	712-0421		Nut, Wing w/Bell Washer, 5/16-18	2
8	725-3174		Battery, 500 cca Dry	1
9	725-3273		Switch, PTO Reverse Override	1
10	747-3433		Rod, Battery Holddown	2


† Not Shown

TRANSMISSION CONNECTIONS

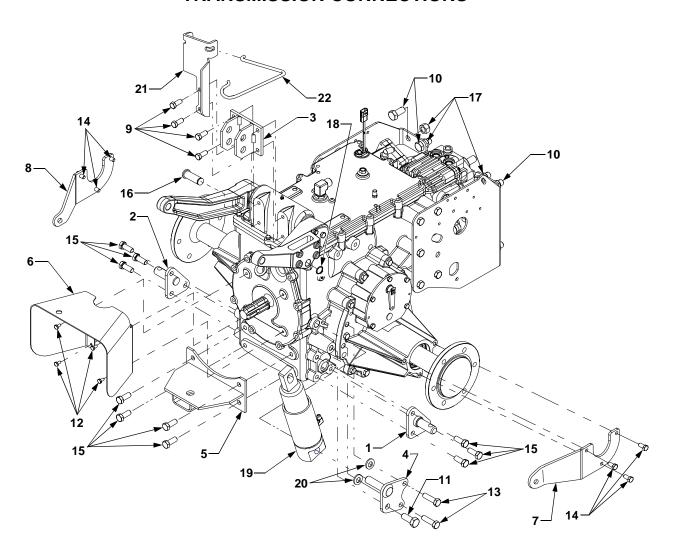

REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	CODE DESCRIPTION	QTY.
1	603-0748	0637	Bracket, Lower Hitch RH	1	12	710-3039	Screw, Hex Cap	4
2	603-0751	0637	Bracket, Lower Hitch LH	1			5/16-18 x .5 GR5	
3	603-0753	0637	Bracket, Top Link	1	13	710-3067	Screw, Hex Cap	2
4	603-0754A	0637	Bracket, Cylinder	1			1/2-13 x 1.75 GR5	
5	603-0758	0637	Bracket, Drawbar	1	14	710-3119	Screw, Hex Cap	6
6	703-3542A		Shield, PTO	1			3/8-16 x .75 GR5	
	777S30634		Graphic, Warning	1	15	710-3131	Screw, Hex Cap	10
7	703-3548A		Bracket, Chain LH	1			1/2-13 x 1.0 GR5	
8	703-3549A		Bracket, Chain RH	1	16	711-1503	Pin, Lift, .75 x 2.125	. 1
9	710-0505		Screw, Hex Cap	4	17	712-3063	Nut, Hex Lock, 5/8-18	8
			7/16-14 x 1/0 GR5		18	716-0101	Ring, Snap, 75 Dia	. 1
10	710-0964A		Screw, Hex Cap	8	19	717-3504	Cylinder, Lift	. 1
			5/8-18 x 1.31 GR5		20	736-0192	Washer, Flat, .531 x .93 x .09	2
11	710-1515		Screw, Hex Cap	1	21	703-05133	Bracket, Hitch Clip	1
			5/8-11 x 1.5 ĠR5		22	747-04109	Rod, Top Link Retainer	1


2WD TRANSMISSION

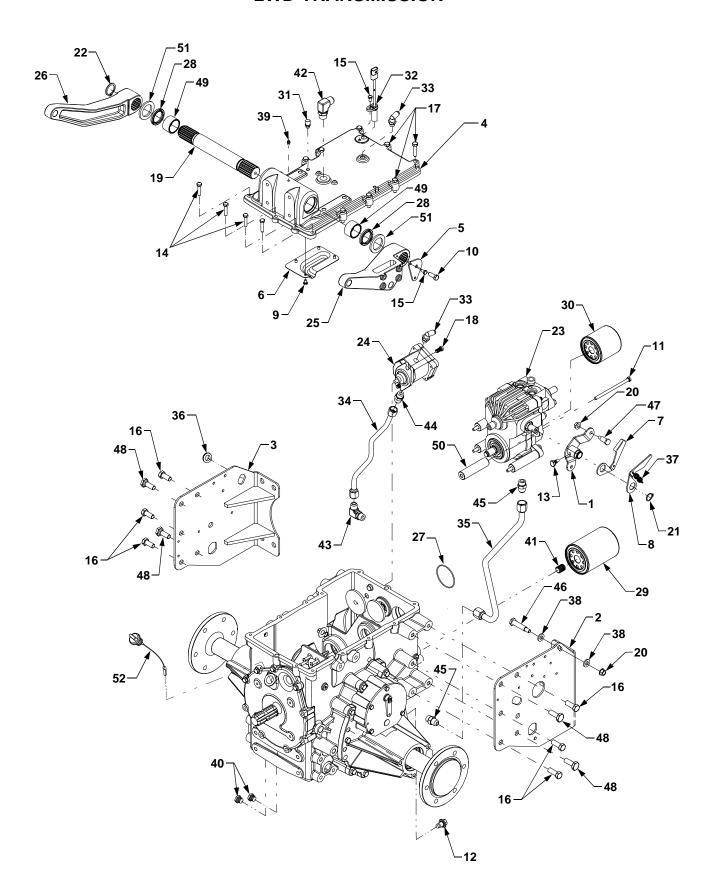

2WD TRANSMISSION

REF.		CODE	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	CODE DESCRIPTION	QTY.
	TBD		Transmission Ass'y., Includes	1	21	716-0111	Ring, Retaining	1
	707 0005		Ref. Nos.	0.5 -1	22	716-0195	Ring, Retaining	1
	737-3025 737-3062		Transmission Oil, 1 Qt. Transmission Oil, 1 Gal.	6.5 gl.	23	717-3507	Pump, Hydrostatic Transmission	1
	737-3002		Transmission Oil, 5 Gal.		24	718-3131	Pump, Auxiliary Hydraulic	1
	759-3958		Sealant, Loctite® Black, 5.3 oz.	AR	25	719-3166	Arm, Upper Hitch RH	1
1	603-0688A		Arm, Hydro Control	1	26	719-3167	Arm, Upper Hitch LH	1
2	603-0712A		Bracket, Transmission Mtg. RH	1	27	721-0501	O-Ring, 2.987 ID x .103 Dia	
3	603-0713A		Bracket, Transmission Mtg. RH	1	28	721-0510	Seal, Oil, 1.5 x 2.0 x .25	2
4	619-3059		Cover, Transmission Housing		29	723-0405	Filter, Oil - Hydraulic System	1
5	703-3577		Plate, Feedback		30	723-3014	Filter, Oil - Hydro Pump	1
6	703-3715		Baffle, Oil		31	723-3021	Breather, Transmission	1
7	703-05041		Arm, Neutral RH		32	725-3272	Sensor, RPM	
8	703-05041		Arm, Neutral LH		33	727-3012	Fitting, 90°	
9	710-03042		Screw, Hex Cap,		34	727-3176	Tube, Auxiliary Pump Suction	
3	710-0234		1/4-20 x .375 GR5	7	35	727-3181	Tube, Hydro Suction	1
10	710-0591		Screw, Hex Cap Lock,	1	36	731-04018	Grommet	
	7 10 0001		3.8-24 x 1.0 GR5	•	37	732-1162	Spring, Extension	1
11	710-0833		Screw, Hex Cap,	4	38	736-3052	Washer, Flat, .406 x 1.0 x .105 .	2
			5/16-18 x 5.25 GR5	•	39	737-0146	Fitting, Grease	
12	710-1633		Screw, Plug, M14 x 1.5 x .827	1	40	737-0349	Plug, Fitting	
13	710-1853		Screw, Hex Special Set,		41	737-3105	Fitting, Filter Nipple	
			5/16-18 x .625		42	737-3108	Fitting, 90°	
14	710-3005		Screw, Hex Cap,	4	43	737-3111	Fitting, 90°	
			3/8-16 x 1.25 GR5		44	737-3112	Fitting, Straight	
15	710-3013		Screw, Hex Cap,	2	45	737-3113	Fitting, Straight	
			1/4-20 x .5 GR5		46	738-0108	Screw, Shoulder, .498 Dia x 1.45	1
16	710-3032		Screw, Hex Cap,	6	47	738-0430	Screw, Shoulder, .50 Dia x .685	1
17	710-3120		1/2-13 x 1.25 GR5 Screw, Hex Cap Lock ,	9	48	738-04001	Screw, Shoulder,	4
17	7 10-3120		3/8-16 x 1.5 GR5	9	49	741-1110	Bearing, Sleeve,	2
18	710-3262		Screw, Low Hd. Cap,	2	75	7 71 1110	1.52 x 1.75 x 1.0	_
.0	. 10 0202		3/8-16 x .75	_	50	750-1208	Spacer, .40 x 1.0 x 3.9	4
19	711-1355		Shaft, Rock	1	51	750-1239	Spacer, 1.52 x 2.25 x .188	2
20	712-0431		Nut, Hex Flange Lock, 3/8-16	2	52	737-04018	Dipstick	1


DIFFERENTIAL AND FINAL DRIVE

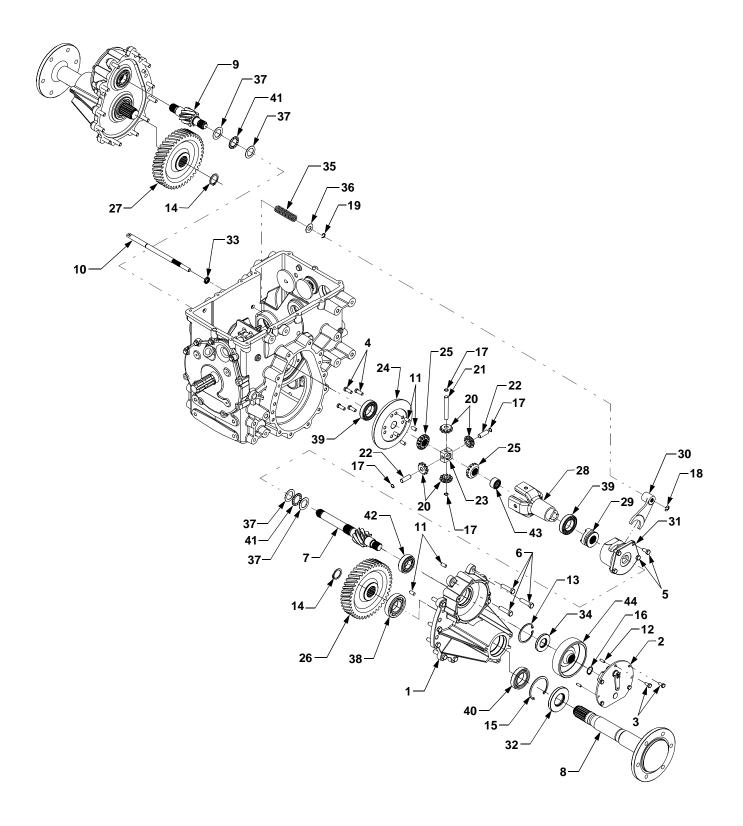

DIFFERENTIAL AND FINAL DRIVE


REF.	PART			
NO.	NUMBER	CODE	DESCRIPTION	QTY.
1	619-3060		Housing, Axle	2
2	661-3014		Brake Assembly, Drum	2
3	710-0538		Screw, Hex Cap Lock,	10
4	710-1695		Screw, Socket Hd. Cap, 3/8-16 x 1.0	4
5	710-3119		Screw, Hex Cap Lock, 3/8-16 x .75 GR5	4
6	710-3238		Screw, Hex Cap Lock,	24
7	711-1326		Shaft, Axle Stub RH	1
8	711-1327		Shaft, Axle	2
9	711-1358		Shaft, Axle Stub LH	1
10	711-1389A		Shaft, Differential Lock Actuator	1
11	715-0226		Pin, Dowel, .3752 x .75	8
12	715-3010		Pin, Dowel, .25 x .75	4
13	716-0180		Ring, Retaining	2
14	716-0195		Rjng, Retaining	2
15	716-0196		Ring, Retaining	2
16	716-0390		Ring, Retaining	2
17	716-0391		Ring, Retaining	4
18	716-0396		Clip, Rotor	1
19	716-0397		Ring, Retaining	1
20	717-1120		Gear, Differential, 10T	4
21	717-1173		Shaft, Cross	1
22	717-1178		Shaft, Cross	2
23	717-1180		Block, Differential Pinion	1
24	717-3316		Gear, Bevel, 65T	1
25	717-3317		Gear, Miter, 14T	2
26	717-3471		Gear, Drop Axle, 42T RH	1
27	717-3478		Gear, Drop Axle, 42T LH	1
28	718-0666		Carrier, Differential	1
29	718-3104		Collar, Differential Lock	1
30	718-3105		Yoke, Differential Lock	1
31	718-3112		Cover, Bearing	1
32	721-0495		Seal, Oil, 50mm x 75 mm x 10mm	2
33	721-0496		Seal, Oil	1
34	721-3020A		Seal, Oil, 1.181 x 2.453 x .276	2
35	732-0187		Spring, Compression	1
36	736-0355		Washer, Flat, .56 x 1.0 x .04	1
37	736-0715		Washer, Thrust, 1.12 x 1.75 x .03	4
38	741-0721		Bearing, Ball	2
39	741-1104		Bearing, Ball	2
40	741-1107		Bearing, Ball	2
41	741-1112		Bearing, Thrust	2
42	741-3033A		Bearing, Ball	2
43	741-3080		Bearing, Needle	1
44	761-3071		Drum, Brake	2

TRACTION DRIVE

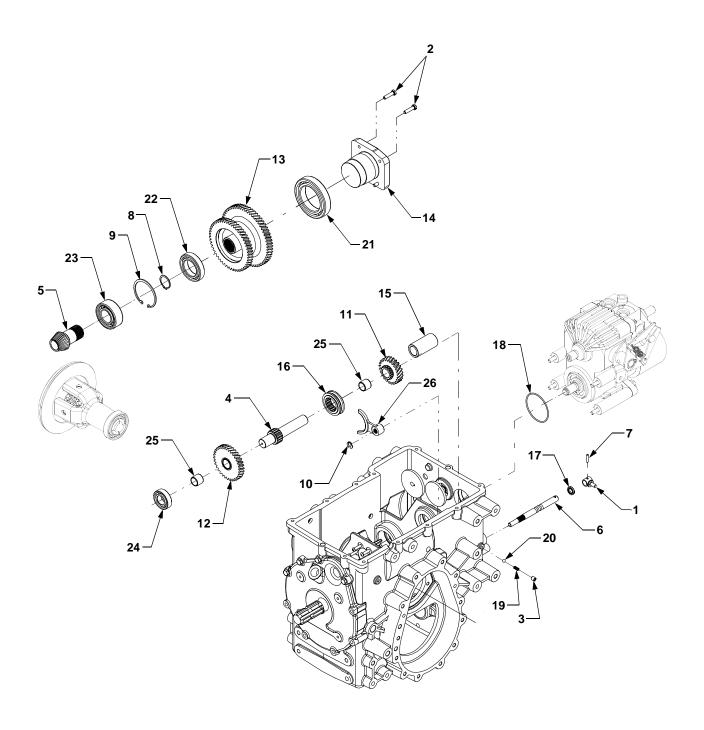

TRACTION DRIVE


REF.	PART NUMBER	CODE	DESCRIPTION	QTY.
		CODE		
1	603-0906		Pin Assembly, 2 Speed	1
2	710-0573		Screw, Hex Cap Lock,5/16-18 x 1.25 GR5	4
3	710-3006		Screw, Cup Set, 5/16-18 x 3/8	1
4	711-1339		Shaft, Motor	1
5	711-1344		Shaft, Pinion, 16T	1
6	711-1397		Shaft, 2 Speed Actuator	1
7	715-0159		Pin, Spirol, 3/16 x .875	1
8	716-0185		Ring, Retaining	1
9	716-0387		Ring, Retaining	1
10	716-0396		Clip, Rotor	1
11	717-3472		Gear, Drive Pinion, LO 24T:17T	1
12	717-3473		Gear, Drive Pinion, HI 33T: 17T	1
13	717-3480		Gear, Drive, LO:59T; HI 50T	1
14	718-3141		Cover, Front	1
15	718-0678		Spacer, Drive	1
16	718-3116		Collar, 2 Speed	1
17	721-0496		Seal, Oil	1
18	721-0501		O-Ring	1
19	732-0863		Spring, Detent	1
20	741-0862		Ball, Detent	1
21	741-1106		Bearing, Ball	1
22	741-1107		Bearing, Ball	1
23	741-1109		Bearing, Angular Contact Ball	1
24	741-3037		Bearing, Ball	1
25	741-3118		Bearing, Sleeve	2
26	748-3096		Yoke, 2 Speed	1

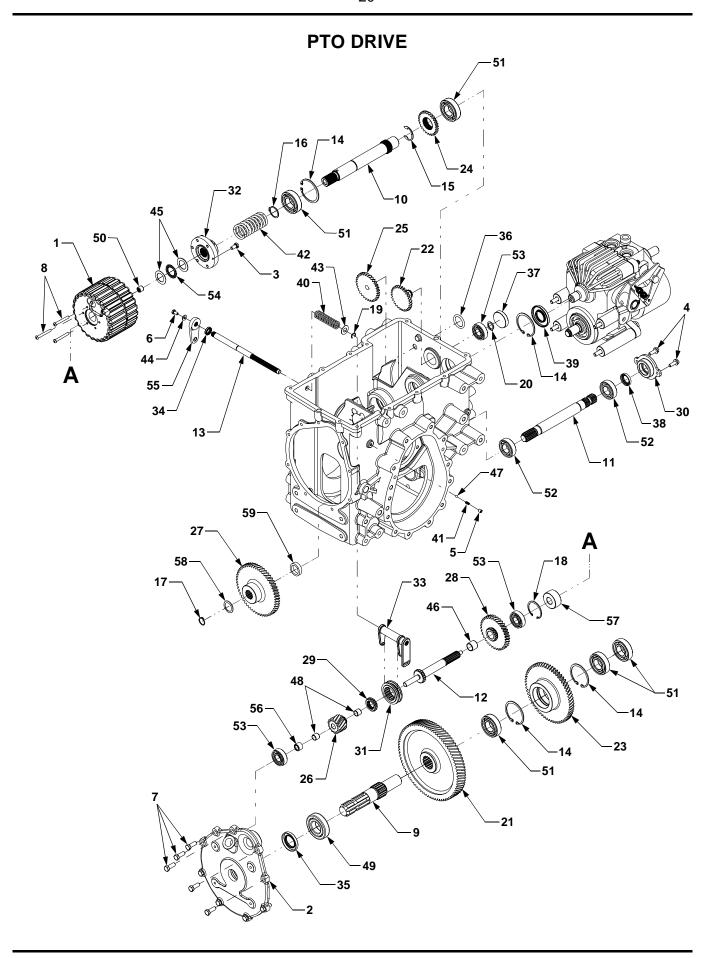

PTO DRIVE

REF. NO.	PART NUMBER	CODE DESCRIPTION	QTY.	REF. NO.	PART NUMBER	CODE DESCRIPTION Q	TY.
1	618-3189	Clutch Assembly, PTO	1	31	718-3116	Collar, 2 Speed	1
2	619-3076A	Housing, Rear	1	32	718-3134	Coupling, PTO	1
3	710-0538	Screw, Hex Cap Lock,	6	33	719-0551A	Actuator, PTO	1
		5/16-18 x .625 GR5		34	721-0496	Seal, Oil	1
4	710-1238	Screw, Hex Wash Hd,	2	35	721- 0497	Seal, Oil	1
		5/16-18 x .875 GR5		36	721-0500	O-Ring	1
5	710-3006	Screw, Cup Set, 5/16-18 x 3/8	1	37	721-0504	Plug, Oil	1
6	710-3013	Screw, Hex Cap, 1/4-20 x .5 GR5		38	721-0509	Seal, Oil	1
7	710-3118	Screw, Hex Cap Lock,	9	39	721-3020A	Seal, Oil	1
_		3/8-16 x 1.0 GR5	_	40	732-0187	Spring, Compression	1
8	710-04003	Screw, Round Hd, 6mm x 40mm	6	41	732-0863	Spring, Detent	1
9	711-1325	Shaft, 540 PTO	1	42	732-0980	Spring, Compression	1
10	711-1337	Shaft, Input	1	43	736-0355	Washer, Flat, .56 x 1.0 x .040	1
11 12	711-1345 711-1371	Shaft, 2000 PTOShaft, PTO Back	1 1	44	736-0463	Washer, Flat,	1
13	711-1371	Shaft, PTO Actuator	1	45	736-0615		2
14	716-0180	Ring, Retaining	4	45	730-0013	1.007 x 1.542 x .03	2
15	716-0200	Ring, Retaining	1	46	741-0724	Bearing, Sleeve,	1
16	716-0201	Ring, Retaining	1			20mm x 23mm x 20mm	
17	716-0384	Ring, Retaining	1	47	741-0862	Ball, Detent	1
18	716-0393	Ring, Retaining	1	48	741-0991		2
19	716-0397	Ring, Retaining	1			13mm x 15mm x 10mm	
20	716-3001	Ring, Retaining	1	49	741-1100	Bearing, Ball	1
21	717-3469	Gear, 540 PTO: 81T	1	50	741-1118	Bearing, Needle	1
22	717-3479	Gear, Auxiliary Drive Idler: 28T .	1	51	741-3033A	3,	5
23	717-3487	Gear, 2000 PTO: 61T	1	52	741-3037	3,	2
24	717-3490	Gear, Auxiliary Drive Pinion: 28T	1	53	741-3057	3,	3
25	717-3491	Gear, Auxiliary Drive: 32T	1	54	741-3083	Bearing, Needle Thrust	1
26	717-3492	Gear, 540 PTO Pinion: 14T	1	55	748-3094	Arm, PTO Select	1
27	717-3494B	Gear, 2000 PTO Pinion: 54T	1	56	750-1223	Spacer, 13mm x 20mm x 14mm	1
28	717-3500	Gear, 2000 PTO Pinion: 34T	1	57	750-1228	Spacer, .80 x 1.85 x .855	1
29	718-0668	Gear, Spline Coupling	1	58	736-0570	Washer, Flat, .865 x 1.145 x .03	1
30	718-0681	Cover, 2000 PTO	1	59	750-0532	Spacer, .980 x 1.25 x .420	1

ENGINE AND DRIVE SHAFT

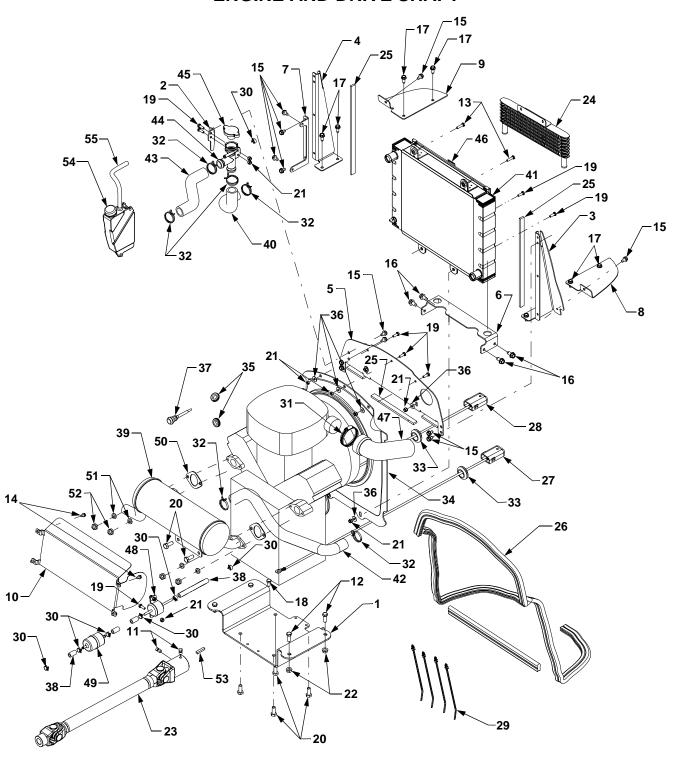


ENGINE AND DRIVE SHAFT

REF. NO.	PART NUMBER	CODE DESCRIPTION	QTY.	REF. NO.		CODE	DESCRIPTION	QTY.
†	629-3063	Harness, Engine	1	23	717-3498		Shaft, Drive	1
1	703-3521A	Plate, Engine Mtg	1	24	718-3132		Cooler, Oil	1
2	703-3684	Bracket, Filler Neck	1	25	722-3022		Tape, Foam, .625 wide	42in.
3	703-3688	Bracket, Radiator Mtg. RH.	1	26	723-3061		Seal, Heat Baffle	96in.
	777S30632	Graphic, Warning	1	27	725-3282		Wire, Battery Neg	1
4	703-3689 777S30632	Bracket, Radiator Mtg. LH .	1	28	725-3289		Wire, Battery Pos	1
_		Graphic, Warning	1	29	726-0154		Tie, Cable - Push Mount	4
5	703-3691 777S30631	Plate, Radiator Baffle Graphic, Fan Warning	1	30	726-0205		Clamp, Hose	7
	777S30633	Graphic, Warning	i	31	726-0476		Clamp, Hose - Adjustable	1
6	703-3692	Bracket, Radiator Mtg	1	32	726-0480		Clamp, Hose	' 6
7	703-3722	Bracket, Ovrflw Bottle Mtg.	1	33	731-04018		Grommet	2
8	703-05140	Plate, Baffle RH	1	34	731-3364		Shroud, Fan	1
9	703-05141	Plate, Baffle LH	1	35	735-0226		Grommet	2
10	703-4063	Shield, Heat	1	36	736-0173		Washer, Flat,	7
11	710-0357	Screw, Square Hd. Set,	2				.28 x .74 x .063	
		3/8-16		37	746-04015		Cable, Choke Control	
12	710-0514	Screw, Hex Cap,	4	38	751-3130		Fuel Line 5/16 ID	_
40	740.0507	3/8-16 x 1.0 GR5	_	39	751-3166		Muffler	1
13	710-0597	Screw, Hex Cap,	2	40	751-3177		Hose, Filler to Radiator	1
14	710-0599	Screw, Hex Wash Hd Tapp	4	41	751-3185		Radiator	1
17	710-0333	1/4-20 x .5	7	42	751-3187		Hose, Lower Radiator	1
15	710-0607	Screw, Hex Wash Hd Tapp	12	43	751-3189		Hose, Engine to Filler Neck	1
		5/16-18 x .5		44	751-3190		Filler Neck, Remote Radiator	1
16	710-0623	Screw, Hex Wash Hd Tapp	4	45	751-3192		Cap, Remote Filler	1
		3/8-16 x .75		46	751-3193		Screen, Radiator	1
17	710-1260A	Screw, Hex Wash Hd Tapp 5/16-18 x .75	8	47	751-3203		Hose, Intake Air	1
10	740 4276			48	KM-49040-2065		Pump, Fuel	1
18	710-1376 710-3015	Screw, Hex Cap, M8-20 x 16 Screw, Hex Cap,	6 1 9	49	KM-49019-1055		Filter, Fuel	1
19	710-3015	1/4-20 x .75 GR5	9	50 51	KM-11060-2467 KM-461F0800		Gasket, Exhaust	2 4
20	710-3208	Screw, Hex Cap,	6	52	KM-317R0800		Nut, Hex	-
		M10 x 1.5 x 25	·	53	KM-92038-2101			4
21	712-0324	Nut, Hex Nylon Insert Lock	11	54	KM-43078-2055		Key, Crankshaft Bottle, Over Flow	1 1
		1/4-20 GŘ8		55	KM-39062-2086		Tube	1
22	712-0431	Nut, Hx FInge Lock, 3/8-16	4	33	TKW-03002-2000		T UDG	'

[†] Not Shown


CYLINDER HEADS AND CRANKCASE

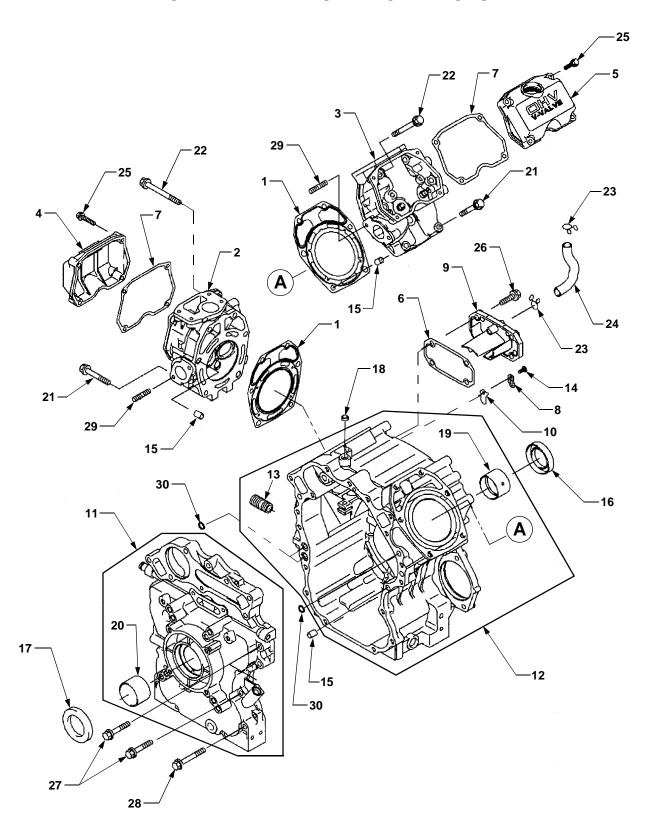

CYLINDER HEADS AND CRANKCASE


REF.	PART NUMBER	DESCRIPTION	QTY.
1	KM-11004-2142	Gasket, Head	2 1
2 3	KM-11008-2145	Head, Cylinder	•
3 4	KM-11008-2146	Head, Cylinder	1 1
-	KM-11022-2072	Cover, Rocker	1
5	KM-11022-2073	Cover, Rocker	•
6 7	KM-11060-2466	Gasket, Breather	1
	KM-11060-2470	Gasket, Rocker Cover	2
8	KM-13271-2105	Plate, Breather	2
9	KM-14091-2064	Cover, Breather	1
10	KM-16126-2225	Valve, Breather	2
11	KM-49015-6239	Cover, Crankcase	1
12	KM-49120-6127	Crankcase,(Includes Ref. Nos. 13 and 19)	1
13	KM-59071-2079	Joint	1
14	KM-92009-2308	Screw	2
15	KM-92043-1037	Pin	6
16	KM-92049-2242	Seal, Oil	1
17	KM-92049-2243	Seal, Oil	1
18	KM-92093-2086	Seal	1
19	KM-92141-2118	Bearing, Plane	1
20	KM-92141-2119	Bearing, Plane	1
21	KM-92151-2158	Bolt, M8 x 55	4
22	KM-92151-2159	Bolt, M8 x 80	8
23	KM-92170-2002	Clamp	2
24	KM-92191-2105	Tube	1
25	KM-130G0630	Bolt, Flange	8
26	KM-130G0830	Bolt, Flange	4
27	KM-130G0845	Bolt, Flange	6
28	KM-130G0860	Bolt, Flange	4
29	KM-172G0822	Bolt, Stud	4
30	KM-670B2011	O-Ring	3

PISTONS AND CRANKSHAFT

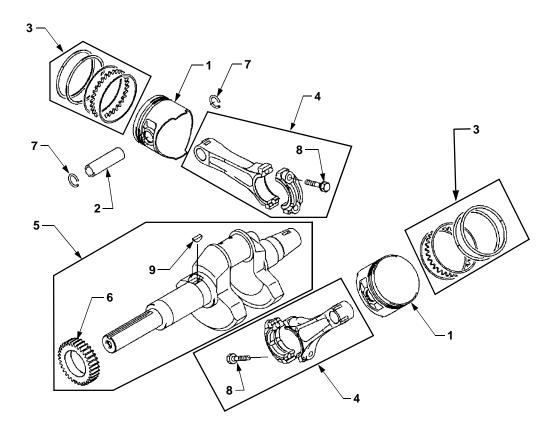


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	KM-13001-2125	Piston	2
2	KM-13002-2069	Pin, Piston	2
3	KM-13008-6007	Ring Set, Piston	2
4	KM-13251-2058	Rod, Connecting(Includes Ref No. 8 [Qty. 2])	2
5	KM-49119-2198	Crankshaft Assembly(Includes Ref Nos. 6 and 9)	1
6	KM-59051-2358	Gear, Spur, 33T	1
7	KM-92036-008	Ring, Snap	4
8	KM-92151-2150	Bolt, 7 x 36	4
9	KM-510A5100	Key, Woodruff	1

VALVES AND CAMSHAFT

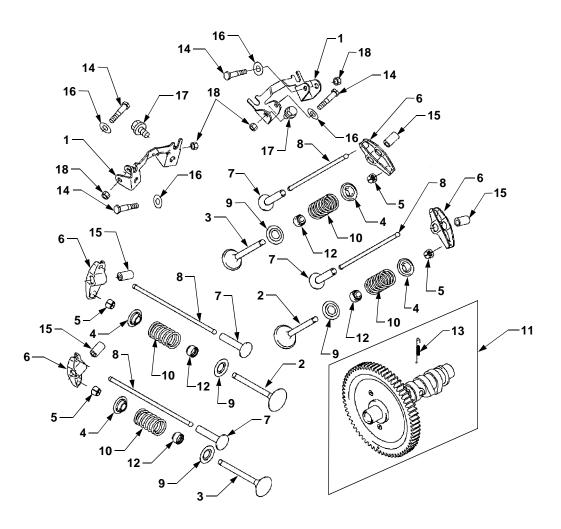


REF. NO.	PART NUMBER	DESCRIPTION			PART NUMBER	DESCRIPTION	QTY.
1	KM-11051-2092	Bracket	2	10	KM-49078-2060	Spring, Valve	4
2	KM-12004-2113	Valve, Intake	2	11	KM-49118-2138	Camshaft	1
3	KM-12005-2100	Valve, Exhaust	2	12	KM-92049-2100	Seal, Oil	4
4	KM-12009-2060	Retainer, Valve Spring	4	13	KM-92145-2085	Spring	' 1
5	KM-12011-2052	Collet		14	KM-92151-2165	Bolt, M6	4
6	KM-12016-2063	Arm, Rocker	4	15	KM-92152-2077	Collar	' 4
7	KM-12032-2060	Tappet	4	16	KM-92200-2128	Washer, 8.1 x 18 x .5	4
8	KM-13116-2074	Rod, Push		17	KM-130G0814	Bolt, Flanged	4
9	KM-16007-2052	Seat, Spring	4	18	KM-311B0600	Nut, Hex	4

LUBRICATION

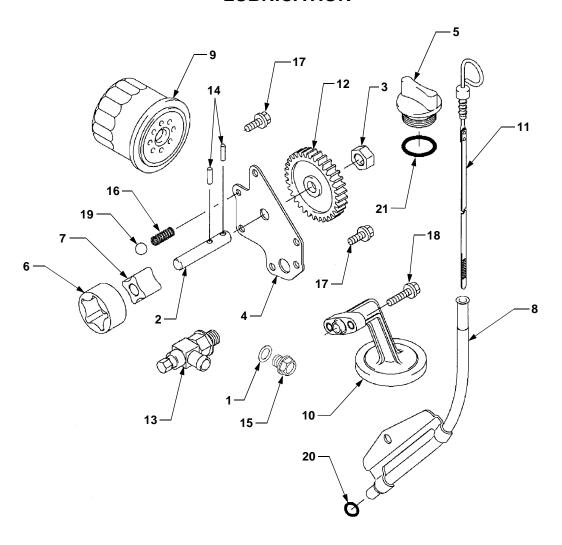


REF.	PART			REF.	PART		
NO.	NUMBER	DESCRIPTION	QTY.	NO.	NUMBER	DESCRIPTION	QTY.
1	KM-11009-2566	Gasket, Drain Plug	2	12	KM-59051-2354	Gear, Spur, 33T	1
2	KM-13107-2281	Shaft, Oil Pump	1	13	KM-99969-1395	Drain, Oil	1
3	KM-13280-2061	Holder, Oil Pump	1	14	KM-92042-014	Pin	2
4	KM-14091-2065	Cover, Oil Pump	1	15	KM-92066-2099	Plug, Drain	2
5	KM-16115-2126	Cap, Oil Filler	1	16	KM-92144-2053	Spring	
6	KM-16154-1075	Rotor, Pump Outer		17	KM-130G0616	Bolt, Flanged	
7	KM-16154-1076	Rotor, Pump Inner		18	KM-130G0625	Bolt, Flanged	
8	KM-32153-20769H	Pipe, Oil Gauge	1	19	KM-600A1300	Ball, Steel	
9	KM-49065-2078	Filter, Oil	1	20	KM-670B2010	O-Ring	
10	KM-49065-2082	Filter, Oil Suction	1	21	KM-670B3025	O-Ring	
11	KM-52005-2132	Gauge, Oil	1	- '	1111 07 0B0020	5 King	•

ELECTRICAL

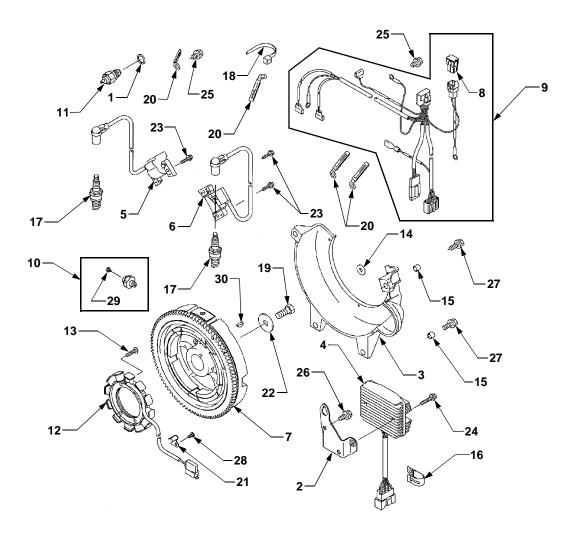

REF.		DESCRIPTION	QTY.	REF.	PART NUMBER	DESCRIPTION	QTY.
1	KM-11009-2766	Gasket	1	16	KM-92037-2101	Clamp	
2	KM-11052-2068	Bracket	1	17	KM-BPR2ES	Plug, Spark	
3	KM-14083-2055	Cover, Flywheel	1	18	KM-92072-1195	Band	
4	KM-21066-2079	Regulator, Voltage		19	KM-92151-2097	Bolt, 12 x 30	
5	KM-21121-2090	Coil, Ignition, No. 1		20	KM-92170-2060	Clamp	
6	KM-21121-2091	Coil, Ignition, No. 2		21	KM-92171-2060	Clamp	
7	KM-21193-2177	Flywheel Assembly		22	KM-92200-2119	Washer, 12.2 x 40 x 3.0	
8	KM-26004-1093	Fuse	1	23	KM-130G0520	Bolt, Flanged	4
9	KM-26030-2326	Harness (Includes Ref. No. 8) .	1	24	KM-130G0630	Bolt, Flanged	
10	KM-27010-2170	Switch	1	25	KM-130G0812	Bolt, Flanged	
11	KM-27010-2182	Switch	1	26	KM-130G0816	Bolt, Flanged	
12	KM-590331-2127	Coil, Charging	1	27	KM-130G0820	Bolt, Flanged	4
13	KM-92009-2273	Screw	4	28	KM-214B0510	Screw, Pan	1
14	KM-92022-2104	Washer	2	29	KM-241B0406	Screw, Pan	1
15	KM-92027-1568	Collar, 8.3 x 11.5 x 9	4	30	KM-510A5100	Key, Woodruff	1


COOLING

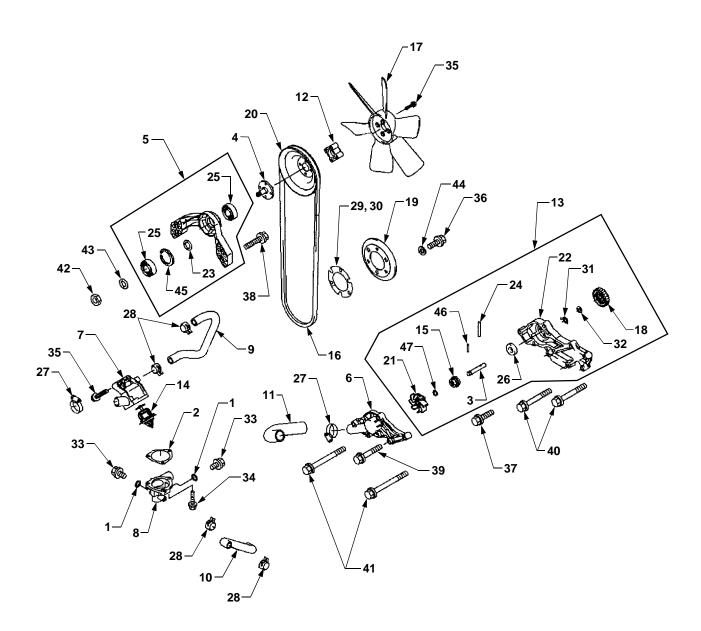

COOLING


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	KM-11009-3028	Gasket	2
2	KM-11060-2475	Gasket, Thermostat	1
3	KM-13107-2097	Shaft, Impeller	1
4	KM-13107-2246	Shaft, Pulley	1
5	KM-13304-6010	Housing AssemblyIncludes Ref. Nos. 23, 25 & 45	1
6	KM-16142-2077	Cover, Pump	1
7	KM-16160-2127	Body, Upper	1
8	KM-16160-6001	Body, Valve	1
9	KM-39062-2084	Hose, Cooling	1
10	KM-39062-2088	Hose, Cooling	1
11	KM-39062-2089	Hose, Cooling	1
12	KM-41077-2064	Adapter	1
13	KM-49044-2063	Pump Assembly, Water	1
14	KM-49054-2058	Thermostat	1
15	KM-49063-1054	Seal, Mechanical	1
16	KM-59011-2058	Belt	1
17	KM-59041-2092	Fan	1
18	KM-59051-2355	Gear, Spur, 25T	1
19	KM-59091-2054	Pulley	1
20	KM-59091-20559H	Pulley	1
21	KM-59256-2069	Impeller	1
22	KM-59336-2078	Case, Pump	1
23	KM-92026-2311	Spacer, 12 x 18 x 1.4	1
24	KM-92043-2237	Pin	1
25	KM-92045-2191	Bearing, Ball	2
26	KM-92049-2111	Seal, Oil	1
27	KM-92170-1284	Clamp	2
28	KM-92171-2056	Clamp	4
29	KM-92180-2013	Shim, T=0.6	AR
30	KM-92180-2014	Shim, T=1.2	AR
31	KM-92200-2134	Washer	1
32	KM-92200-2135	Washer 10.2 x 19 x 0.8	1
33	KM-130C0812	Bolt, Flanged	2
34	KM-130G0625	Bolt, Flanged	3
35	KM-130G0635	Bolt, Flanged	6
36	KM-130G0820	Bolt, Flanged	3
37	KM-130G0830	Bolt, Flanged	2
38	KM-130G0835	Bolt, Flanged	4
39	KM-130G0845	Bolt, Flanged	1
40	KM-130G0860	Bolt, Flanged	2
41	KM-130G0880	Bolt, Flanged	4
42	KM-315B1000	Nut, Hex Fine	1
43	KM-410B1000	Washer, Plain	1
44	KM-461F0800	Washer, Spring	3
45	KM-481J2800	Circlip	1
46	KM-551A0314	Pin, Dowel	1
47	KM-670B1507	O-Ring	1

CONTROL LINKAGE AND GOVERNOR

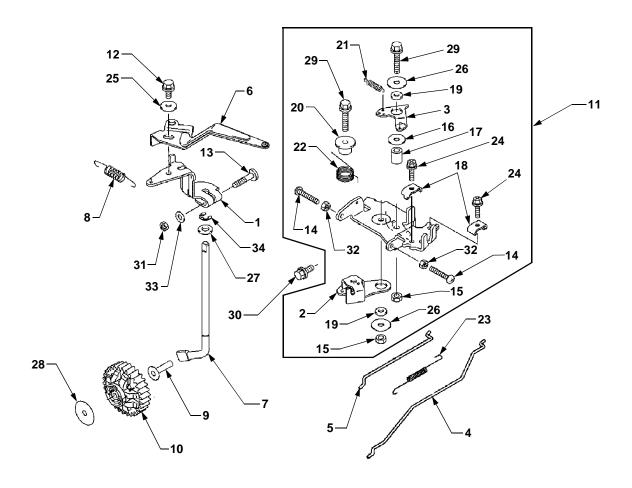


REF.	PART NUMBER	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	KM-11051-2113	Bracket	1	18	KM-92037-2209	Clamp	2
2	KM-13168-2466	Lever, Throttle	1	19	KM-92143-2135	Collar, 6 x 13 x 2.3	
3	KM-13168-2467	Lever, Choke	1	20	KM-92143-2148	Collar	1
4	KM-16169-2142	Link, Choke	1	21	KM-92144-2052	Spring	1
5	KM-16171-2091	Link	1	22	KM-92145-2058	Spring	1
6	KM-21187-2073	Arm Assembly	1	23	KM-92145-2095	Spring	1
7	KM-39003-2091	Arm, Governor Pivot	1	24	KM-92150-2182	Bolt, 5 x 18	2
8	KM-39129-2099	Spring, Governor	1	25	KM-92200-2035	Washer	1
9	KM-42036-2060	Sleeve	1	26	KM-92200-2108	Washer, 6.5 x 22 x 1.2	2
10	KM-49110-2094	Gear Assembly, Governor	1	27	KM-92200-2120	Washer, 8.3 x 16 x 2.3	1
11	KM-49113-2170	Panel, Control Complete	1	28	KM-92200-2122	Washer, 6.2 x 30 x 0.5	1
12	KM-92002-1902	Bolt	1	29	KM-130B0630	Bolt, Flanged	2
13	KM-92002-2269	Bolt	1	30	KM-130G0614	Bolt, Flanged	2
14	KM-92009-2381	Screw, 5 x 30	2	31	KM-311B0600	Nut, Hex	1
15	KM-92015-1339	Nut	2	32	KM-312B0500	Nut, Hex	2
16	KM-92022-2372	Washer, 6 x 19 x 1.2	1	33	KM-411B0600	Washer, Plain	1
17	KM-92027-1461	Collar	1	34	KM-482J7000	Circlip, E-Ring	1

CARBURETOR

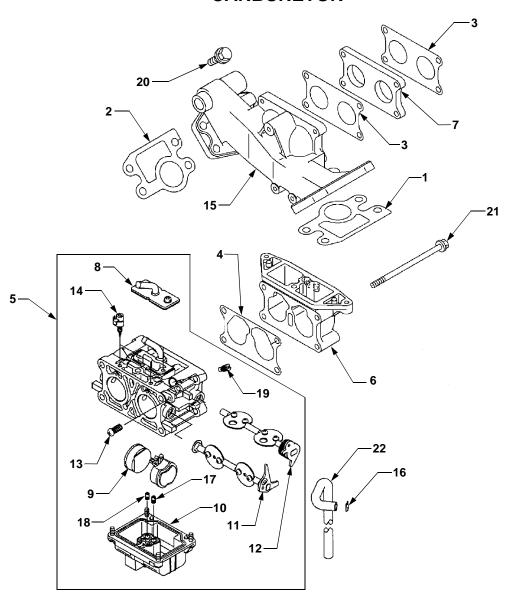


REF. NO.	PART NUMBER	DESCRIPTION	QTY.		PART NUMBER	DESCRIPTION	QTY.
1	KM-11060-2468	Gasket, Intake Manifold	1	14	KM-23013-2063	Screw Assembly	1
2	KM-11060-2469	Gasket, Intake Manifold	1	15	KM-59076-2065	Manifold, Intake	1
3	KM-11060-2471	Gasket, Intake Pipe	2	16	KM-92037-1610	Clamp	1
4	KM-11061-2075	Gasket	1	17	KM-92063-2353	Jet, Main, #110	
5	KM-15003-2786	Carburetor Assembly	1		KM-92063-2410	Jet, Main, #105	
6	KM-16060-2194	Pipe, Intake	1		KM-92063-2420	Jet, Main, #107.5	AR
7	KM-16073-2206	Insulator	1	18	KM-92063-2370	Jet, Main, #111.3	
8	KM-16146-2227	Cover Assembly	1		KM-92063-2380	Jet, Main, #106.3	
9	KM-16183-2006	Float Assembly	1		KM-92063-2421	Jet, Main, #108.8	AK
10	KM-16184-2007	Chamber, Float	1	19	KM-92064-2106	Jet, Pilot, #45	2
11	KM-16185-2041	Valve Assembly, Throttle	1	20	KM-130G0825	Bolt, Flanged	8
12	KM-16186-2036	Valve Assembly, Choke	1	21	KM-130T06110	Bolt, Flanged	4
13	KM-23013-2059	Screw Assembly	1	22	KM-701Q061000	Tube, PVC	1

AIR FILTER

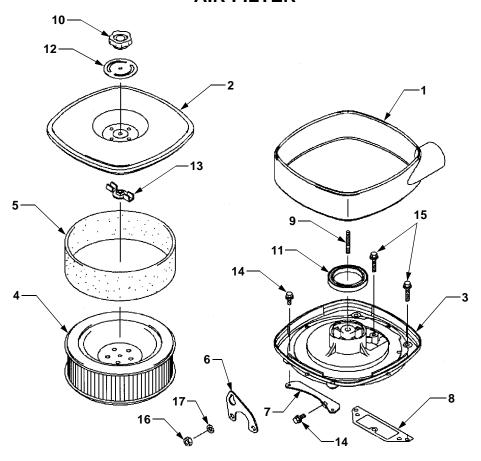


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	KM-11011-2314	Case, Air Filter Body	1
2	KM-11011-2315	Case, Air Filter Upper	1
3	KM-11011-2316	Case, Air Filter Lower	1
4	KM-11013-2195	Element, Air Filter	1
5	KM-11013-2194	Precleaner, Foam	1
6	KM-11051-2088	Bracket	1
7	KM-11051-2089	Bracket, Air Filter	1
8	KM-11061-2085	Gasket, Air Filter	1
9	KM-92004-2152	Stud, 6 x 30	1
10	KM-92015-2138	Nut	1
11	KM-92093-2113	Seal	1
12	KM-92200-2136	Washer	1
13	KM-92210-2079	Nut	1
14	KM-130G0614	Bolt, Flanged	3
15	KM-130G0630	Bolt, Flanged	3
16	KM-317R0800	Nut, Hex	1
17	KM-461F0800	Washer, Spring	1

STARTER

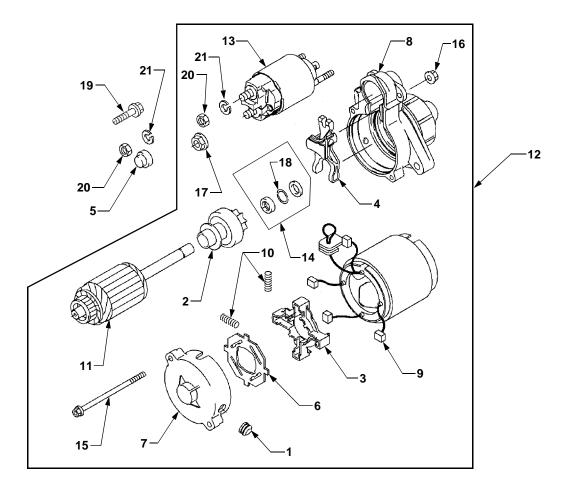

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	KM-11012-2226	Cap	1
2	KM-13081-2108	Clutch Assembly	1
3	KM-13091-2068	Holder, Brush	1
4	KM-13168-2131	Lever, Shift	1
5	KM-14024-2205	Cover	1
6	KM-16073-2098	Insulator	1
7	KM-16146-2187	Cap, Starter End	1
8	KM-16146-2225	Cone, Starter Nose	1
9	KM-21039-2059	Brush	4
10	KM-21040-2052	Spring, Brush	4
11	KM-21080-2054	Armature	1
12	KM-21163-2120	Starter, Electric	1
13	KM-27010-2122	Solenoid, Starter	1
14	KM-32085-2097	Stopper	1
15	KM-92002-2277	Bolt	2
16	KM-92015-2146	Nut	2
17	KM-92015-2147	Nut	1
18	KM-92033-2081	Ring, Snap	1
19	KM-130G0835	Bolt, Flanged	2
20	KM-317B0800	Nut, Hex	2
21	KM-461F0800	Washer, Spring	2


HOOD, GRILL AND SIDE PANELS

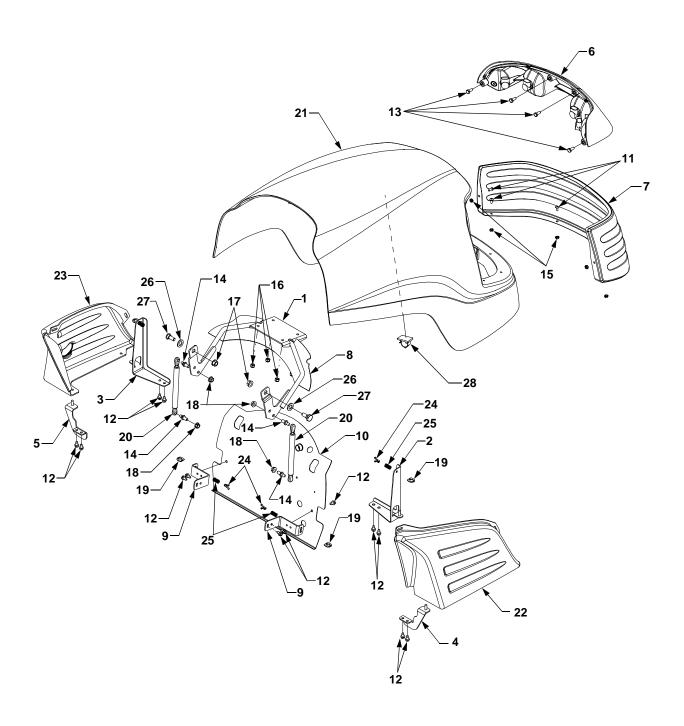

HOOD, GRILL AND SIDE PANELS


REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	603-0719	0637	Hinge Assembly, Hood	1
2	603-0784	0637	Bracket, Side Panel Mtg. RH	1
3	603-0785	0637	Bracket, Side Panel Mtg. LH	1
4	603-0924	0637	Bracket, Side Panel Mtg. RH Rear	1
5	603-0925	0637	Bracket, Side Panel Mtg. LH Rear	1
6	625-0052 725-3161A		Headlight AssemblyBulb, Headlight	1 4
7	703-3394		Screen, Intake	1
8	703-3712		Shield, Upper Heat	1
9	703-3764		Bracket, Panel Mtg	1
10	703-3765		Shield, Lower Heat	1
11	710-0473		Screw, Truss Hd, 10-24 x .5	6
12	710-0599		Screw, Hex Wash Hd Tapp 1/4-20 x .5	14
13	710-0751		Screw, Hex Cap, 1/4-20 x .62 GR5	4
14	710-3170		Stud, Cylinder, 5/16-18 Thrd	4
15	712-0272		Nut, Hex Sems, 10-24	6
16	712-0324		Nut, Hex Nylon Insert Lock, 1/4-20	4
17	712-0431		Nut, Hex Flange Lock, 3/8-16	2
18	712-3004A		Nut, Hex Flange Lock, 5/16-18	4
19	726-3056		Latch, 1/4 Turn Panel	4
20	727-3194		Cylinder, Gas Spring	2
21	731-3277		Hood	1
	777D05419 777D05420		Graphic, Hood RH	1
	777D05420		Graphic, Hood LHGraphic, Model 7252	1 2
22	731-3278		Panel, Side RH	1
23	731-3279		Panel, Side LH	1
24	732-0936		Clip, Spring	4
25	732-0937		Spring, Compression	4
26	736-0272		Washer, Flat, .510 x .1.0 x .060	2
27	738-0380		Screw, Shoulder, .5 x .27 Lg 3/8-16	2
28	726-04010		Clip, Retaining	1

FENDER AND RUNNING BOARD

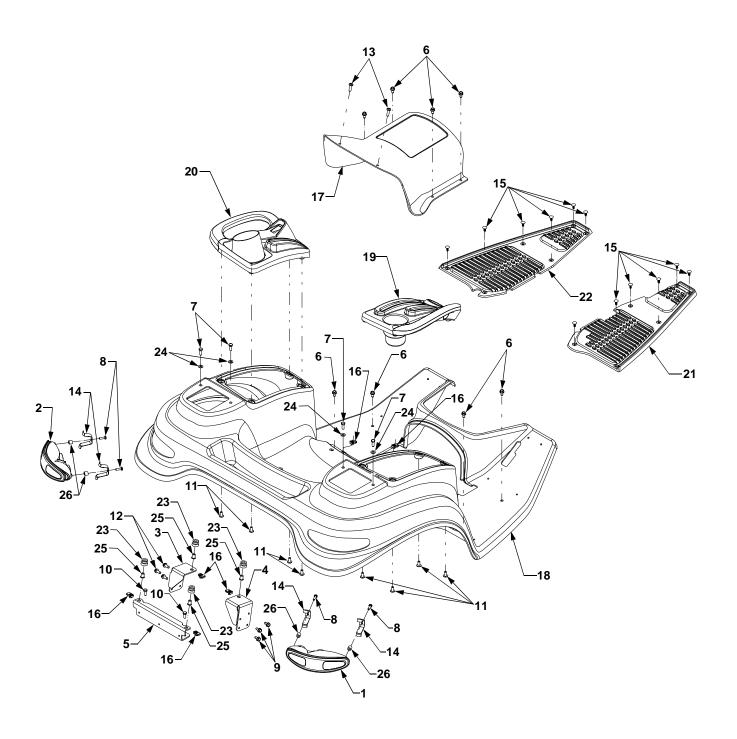


FENDER AND RUNNING BOARD

REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	625-0023B 725-3262 725-3263 629-3059		Light Assembly, Rear RH Bulb Only, Tail Light Bulb Only, Reverse Indicator Light Harness, Tail Light	1 1 1
2	625-0024B 725-3262 725-3263 629-3059		Light Assembly, Rear RH Bulb Only, Tail Light Bulb Only, Reverse Indicator Light Harness, Tail Light	1 1 1 1
3	703-3451		Bracket, Seat Mtg. LH	1
4	703-3572		Bracket, Seat Mtg. RH	1
5	703-3754		Bracket, Rear Seat Support	1
6	710-0604A		Screw, Hex Wash Hd. Tapp 5/16-18 x .625	8
7	710-3038		Screw, Hex Cap5/16-18 x .875 GR5	4
8	710-0206		Screw, Hex Cap 1/4-20 x .875 GR5	4
9	710-3021		Screw, Hex Wash Hd. Tapp 5/16-18 x .625	3
10	710-3008		Screw, Hex Cap5/16-18 x .75 GR5	2
11	710-1242		Screw, Truss Phillips Hd5/16-14 x .75	8
12	710-1260A		Screw, Hex Wash Hd. Tapp 5/16-18 x .75	3
13	710-0971		Screw, Pan Hd. 5/16-18 x 1.0	2
14	726-3057		Clip, Tail Light	4
15	726-3046		Clip, Ratchet Fastener	12
16	726-0211		Speed Nut, 'U' Type, 5/16-18	6
17	731-3324 777S30630		Cover, FenderGraphic, Warning	1 1
18	731-3289 777S30635 777D06181		FenderGraphic, WarningGraphic, Series 7000	1 1 1
19	631-04005		Cover, Fender, RH	1
20	631-04006		Cover, Fender, LH	1
21	735-0669		Pad, Floor, RH	1
22	735-0670		Pad, Floor, LH	1
23	735-0690		Grommet, .4375 ID x .75	4
24	736-3089		Washer, Flat, .345 x 1.0 x .100	4
25	750-3310		Spacer, Flange, .3125 x .4375 x .625	
26	750-04143		Spacer, .258 x .5 x .5	4

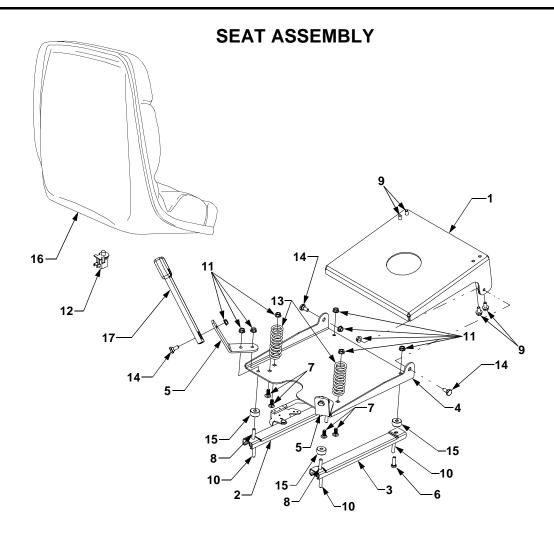


REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	603-0860	0637	Support, Seat - Upper	1
2	603-0866		Track Ass'y., Seat w/Latch	1
3	703-3208		Track Ass'y., Seat w/o Latch	1
4	703-3681A		Tray, Lower Seat	1
5	703-3711		Bracket, Seat Belt	2
6	710-0376		Screw, Hex Cap, 5/16-18 x 1.0 GR5	2
7	710-0451		Screw, Carriage, 5/16-18 x .75	4
8	710-0528		Screw, Hex Cap, 5/16-18 x 1.25 GR5	2
9	710-0759		Screw, Hex Flange, 5/16-18 x .625 GR5	4
10	710-3250		Screw, Socket Hd Cap, 5/16-18 x 1.5	4
11	712-3004A		Nut, Hex Flange Lock, 5/16-18	12
12	725-3167		Switch, Snap Mount (N.O.)	1
13	732-3080A		Spring, Compression, 1.28 x 3.5	2
14	738-0140		Screw, Shoulder, .435 x .178-5/16-18	4
15	750-0258		Spacer, .315 x .750 x .375	4
16	757-04006		Seat, High Back	1
	777D04541 777D01782		Graphic, Cub CadetGraphic, USA	1 1
17	757-3013		Belt Assembly, Seat	1

FUEL TANK

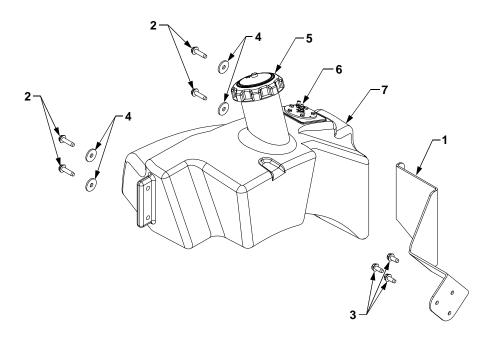


DEE	DART			
REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	703-3563		Bracket, Front Tank Mtg	1
2	710-0817		Screw, Hex Wash Hd Tapp5/16-18 x 1.25	4
3	710-1260A		Screw, Hex Wash Hd Tapp5/16-18 x .75	3
4	736-0231		Washer, Flat, .344 x 1.125 x .12	4
5	751-3124B		Cap, Fuel	1
6	751-3175		Sensor, Fuel Level	1
7	751-3200A		Tank, Fuel	1

FOLDABLE ROPS

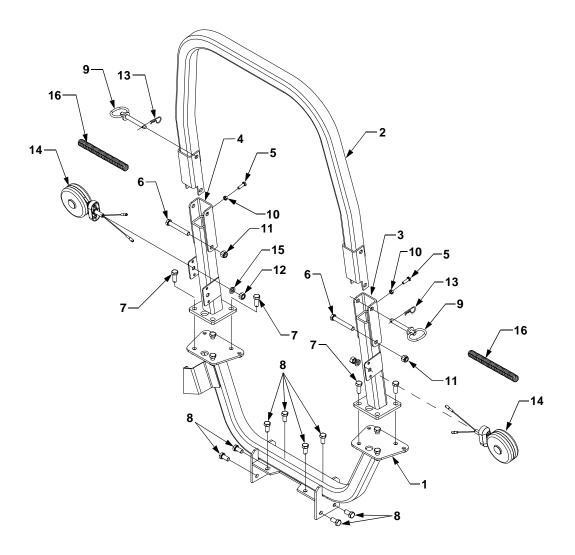


REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	603-0716		ROPS Assembly, Lower	1
2	603-0717		ROPS Assembly, Upper	1
3	603-0858		Mounting Assembly, ROPS RH	1
4	603-0861		Mounting Assembly, ROPS LH	1
5	710-0376		Screw, Hex Cap, 5/16-18 x 1.0 GR5	2
6	710-0515		Screw, Hex Cap, 1/2-20 x 3.5 GR5	2
7	710-3032		Screw, Hex Cap, 1/2-13 x 1.25 GR5	8
8	710-3131		Screw, Hex Cap, 1/2-13 x 1.0 GR5	8
9	711-1610		Pin, Clevis, .5 x 3.5	2
10	712-3046		Nut, Hex Jam, 5/16-18	2
11	712-3058		Nut, Hex Nylon Insert Lock, 1/2-20	2
12	712-3066		Nut, Hex, 1/2-20 GR5	2
13	714-3003		Pin, Internal Cotter	2
14	725-3280		Light Assembly, Hazard	2
	725-3286		Bulb, Light	2
15	736-0921		Washer, Lock, 1/2	2
16	731-0757-16		Conduit	16in.

THREE POINT HITCH

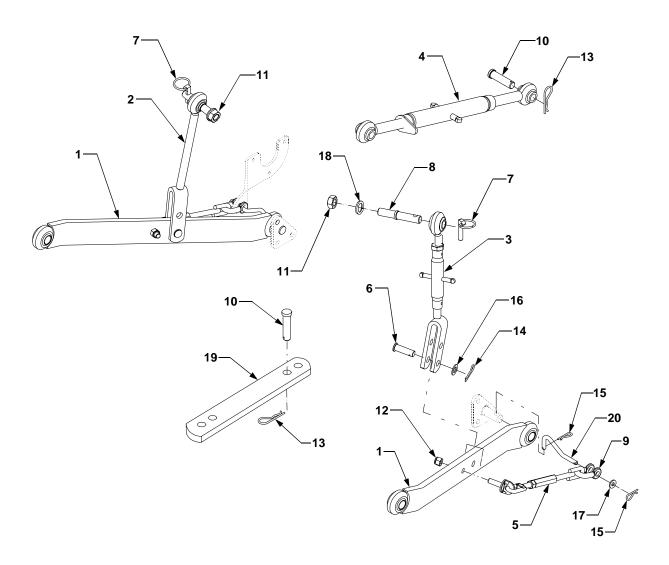

REF.	PART NUMBER	CODE DESCRIPTION		REF. NO.	PART NUMBER	CODE DESCRIPTION	QTY.
140.							
1	603-0750	Link, Lower Hitch	2	11	712-0301	Nut, Hex, 3/4-10 GR5	2
2	603-0756	Link, Lift - Fixed	1	12	712-3058	Nut, Hex Insert Lock, 1/2-20	2
3	603-0757	Link, Lift - Adjustable	1	13	714-0117	Pin, Internal Cotter, .148 x 3.0	2
4	603-0765	Link, Upper Center	1	14	714-0147	Pin, Internal Cotter, .125 x 1.75	2
5	603-0933	Chain Assembly, Check	2	15	714-0149B	Pin, Internal Cotter	4
6	711-0174	Pin, Clevis, .624 Dia	2	16	736-0156	Washer, Flat, .635 x 1.12 x .09	2
7	711-1105	Pin, Klik, 1.75 Lg	2	17	736-0262	Washer, Flat, .385 x .87 x .09	2
8	711-1432	Pin, Upper Lift Arm	2	18	736-0364	Washer, Lock, 3/4	2
9	711-1622	'U' Clevis, Check Chain	2	19	703-3553	Bar, Draw	1
10	711-1648	Pin, Clevis, .75 x 2.75	2	20	747-04014	Pin, Double Clevis	2


AUXILIARY HYDRAULIC LOADER VALVE (IF EQUIPPED)

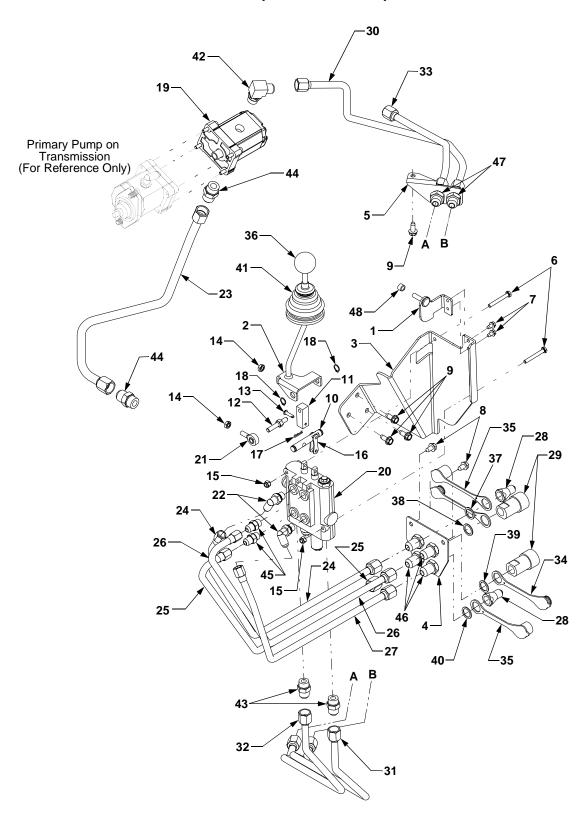

AUXILIARY HYDRAULIC LOADER VALVE (IF EQUIPPED)

REF.			
NO.	NUMBER	DESCRIPTION	QTY.
1	603-0813	Pivot Bracket Assembly	1
2	603-0862	Valve Handle Assembly	1
3	703-3598-0637	Loader Valve Mount Bracket	1
4	703-3972-0637	Fitting Mount Plate	1
5	703-3973-0637	Rear Fitting Mount Plate	1
6	710-0501	Hex Screw, 1/4-20, 2.00, Gr5	2
7	710-0599	Hex Wash. Hd. Tapp Screw 1/4-20 x .50	2
8	710-0604A	Hex Wash. Hd. Tapp Screw 5/16-18 x .625	2
9	710-1260A	Hex Wash. Hd. Tapp Screw 5/16-18 x .75	4
10	711-1611	Valve Pivot Shaft	1
11	711-1624	Valve Spool Link	1
12	711-1637	Ball Joint Pivot Stud	1
13	711-1642	Clevis Pin, .199 x .8125	1
14	712-0256	Jam Nut, 5/16-24, Gr2	2
15	712-0324	Hex Lock Nut, 1/4-20, Gr8, Nylon	2
16	713-3000	Chain Link	1
17	714-0104	Internal Cotter Pin	1
18	716-0865	Snap Ring, .5	2
19	718-3138	Auxiliary Hydraulic Pump	1
	759-3964	Pin, Dowel	2
	759-3965 759-3966	Bolt, Mounting Coupler, Splined	4 1
20	718-3140	Loader Control Valve	1
21	723-0488	Ball Joint, .3125 ld x 5/16-24	1
22	727-3012	Fitting, 90° 6-6 Orb	2
23	727-3206	Tube, Tandum Pump Suction	1
24	727-3210	Tube, Hydraulic - Bucket Rollback	1
25	727-3211	Tube, Hydraulic - Bucket Dump	1
26	727-3212	Tube, Hydraulic - Boom Lift	1
27	727-3213	Tube, Hydraulic - Boom Lower	1
28	727-3224	Coupling, Male Hydraulic, 3/8-18	2
29	727-3225	Coupling, Female Hydr. 3/8-18	2
30	727-3226	Tube, Auxiliary Pump Pressure	1
31	727-3227	Tube, Valve Pressure	1
32	727-3228	Tube, Valve Return	1
33	727-3229	Tube, Valve Return	1
34	727-3261	Plug, Hydraulic Coupler - Male	2
35	727-3262	Plug, Hydraulic Coupler - Female	2
36	731-3353	Knob, 1.625 Dia x 3/8-16 Thd	1
37	731-3374	Washer, Indicator - Red	1
38	731-3375	Washer, Indicator - Yellow	1
39	731-3376	Washer, Indicator - Green	1
40	731-3377	Washer, Indicator - Blue	1
41	735-0696	Joystick Boot	1
42	737-3111	Fitting, 90° -8 Orb	1
43	737-3112	Fitting, Straight -8 Orb	2
44	737-3113	Fitting, Straight	2
45	737-3125	Fitting, Straight - 6 Orb	2
46	737-3129	Fitting, Bulkhead 3/4-16 x 3/8-18	4
47	737-3130	Fitting, Bulkhead 3/4-16 x 3/4-16	2
48	750-0845	Spacer, .34 ID x .5 OD x .31	1

WHEELS

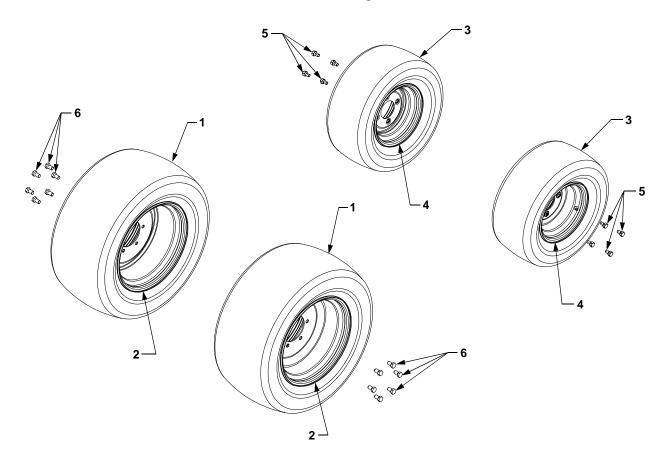

REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	734-3123		Tire, Turf, 27 x 12.0 x 15	2
2	634-3046 734-0255		Rim Assembly Valve Stem	2
3	734-3189		Tire, Tuft, 20 x 9 x 8	2
4	634-3187 734-0255		Rim Assembly Valve Stem	2 2
5	710-1808		Screw, Lug, M12	8
6	710-3294		Bolt, Lug, M14 x 1.5 x 20	12

NOTES